

Exchanging the spare needle of the piercing plier/ 9881525



Screw out the valve with the
valve core tool



Use something solid to support,
hammering out the spare needle





Take the spare needle and put it into the piercing plier



Take a copper tube and press the plier trough, like usual handling.

The spare needle will be pressed into the piercing plier.



Screw the valve back into the piercing plier.