

aLight office LED TEC 4000LM 3'/4'K on/off and/och/og/ja DALI

7014878 Recessed luminaire / Infälld armatur / Innfelt armatur / Upotettu valaisin 40W 4000LM 3'/4'K DALI

7014879E Recessed luminaire / Infälld armatur / Innfelt armatur / Upotettu valaisin 30W 3000LM 3'/4'K


1 Recessed/Infälld/Innfelt/Upotettu

EN Rotate the panel light 45° in horizontal direction.

SV Vrid ljuspanelen 45° i horisontell riktning.

NO Roter panellampen 45° i horisontal retning.

FI Käännä paneelivalaisinta 45° vaakasuunnassa.

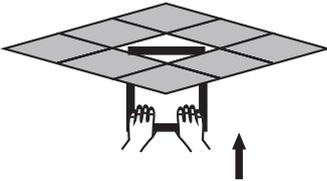


2 EN Make the front of panel face to ceiling square hole.

SV Panelens framsida ska vara vänd mot det fyrkantiga hålet i taket.

NO Lag firkantet hull fra paneloverflaten til taket.

FI Aseta valaisin etupuoli alaspäin katossa olevaan reikään.

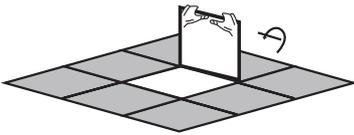


3 EN Adjust it to a suitable position to make it as flat as ceiling.

SV Justera panelen så att den är helt i linje med taket.

NO Juster den til egnet posisjon for å felle den inn i taket.

FI Säädä sopivaa asentoon niin, että se on katon tasalla.




1 Suspended/Pendel/Opphengt/Ripustettu

EN Fix 4 buckles on the backboard of panel light.

SV Skruva fast 4 fästen på ljuspanelens baksida.

NO Fest fire bøyler på baksiden av panellampen.

FI Kiinnitä 4 kiinnittintä paneelivalaisimen takalevyyn.

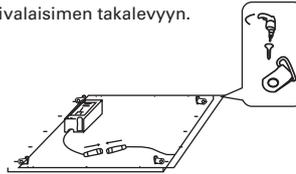


2 EN Fix the hanging wires onto ceiling with expansion bolts.

SV Fäst vajrarna i taket med expanderskruvar.

NO Fest wirene i taket ved hjelp av ekspansjonsbolter.

FI Kiinnitä ripustusvaijerit kattoon paisuntapulteilla.

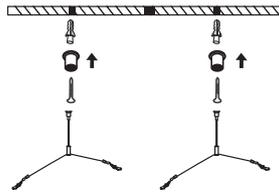

3 EN Adjust hanging wire length for installation height, button the panel light with buckles in 4 corners equipped with wires.

SV Justera installationshöjden genom att förlänga eller förkorta vajrarna. Knäpp fast ljuspanelen i spännande i de fyra hörnen.

NO Juster lengden på wirene til egnet installasjonshøyde, og fest panellampen med bøyler og wire i fire hjørner.

FI Säädä ripustusvaijerin pituus asennuskorkeuden mukaan. Kiinnitä paneelivalaisin 4 nurkassa olevaan kiinnittimeen vaijereilla.




1 Surface Mounted/ Utanpåliggende montering/ Overflatemontert/ Pinta-asennettu

EN Installation 3pcs frame and fix it to ceiling.

SV Montera en 3-delad ram och fäst den i taket.

NO Installasjon tredelt ramme, og fest den til taket.

FI Kiinnitä 3 kehystä kattoon.

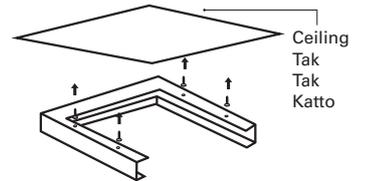


2 EN Insert the panel into the frame in ceiling.

SV För in panelen i ramen i taket.

NO Monter panelet i rammen i taket.

FI Asenna paneeli katossa olevaan kehukseen.

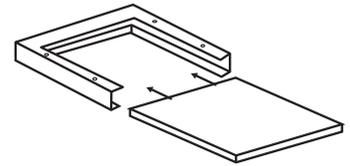


3 EN Assembling the final frame border.

SV Montera den sista ramdelen.

NO Monter rammen.

FI Asenna kehuksen viimeinen osa.

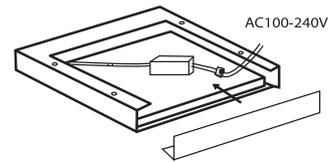

0 = OFF
I = 3000 K
II = 4000 K

EN Turn off the power to the fixture/luminaire before changing the colour temperature (only necessary for the DALI version). When mounting several luminaires in the same innerceiling, potential equalization of supporting structures is recommended.

SV Bryt strömmen till armaturen innan byte av färgtemperatur sker (endast nödvändigt på DALI-versionen). Vid montage av flera armaturer i samma innertaksbärverk rekommenderas potentialutjämning av bärverket.

NO Bryt strømmen til armaturen før du bytter fargetemperatur (kun nødvendig på DALI-utgaven). Ved montering av flere armaturer i samme takloft anbefales potensiell utjevning av støttestrukturer.

FI Katkaise virta valaisimesta ennen väriämpötilan vaihtamista (tarpeen vain DALI-mallissa). Kun asennetaan useita valaisimia samaan kattoon, suositellaan tukirakenteiden tasaamista.