


## How to mount a V9 integrated eyewear in a 3M™ SecureFit™ Safety helmet

Mount the V9 eyewear directly in the helmet - or take out the suspension if you like.

1: Mount the V9 from the outside of the headband. The eyewear clasps around the flat surface on the headband (under the sweatband)

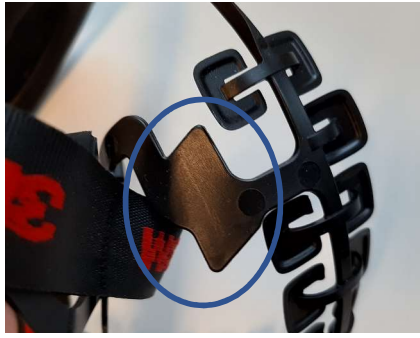

2: Mount the clasp from behind the sweatband, hook the aft part (1) and snap in the front part (2) of the clasp



3: For clearer view the previous images show headband without sweatband. The eyewear can be mounted by pushing the sweatband to the side.

