For locking formworks in concrete castings

MADE IN ITALY



OBIGINAL

DOPPIO BLOCCAGGIO- DOPPIA SICUREZZA



50 years 1961-2011


RAPID Easy to use

Rapid clamps are widely used by all construction companies because they are the most efficient and reliable means for anchoring and docking formworks during concrete castings. The RAPID system guarantees fast set up and ultra fast removal for wooden formworks.






RAPID clamps are unique in the world offering DOUBLE SECURITY with their DOUBLE LOCK system.

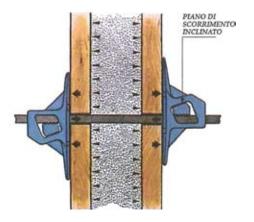


DOUBLE LOCK retaining mechanism

The rod is strongly gripped by the wedge, made of very hard tempered steel, with longitudinal grooves that carve into the iron rod to prevent it from slipping. Locking takes place automatically and gradually as the pressure increases. RAPID clamps prevent formworks structural failure and guarantee always perfectly straight castings.

QUICK TO INSTALL

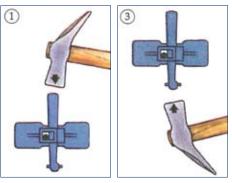

Firstly set up the wood or steel formworks for concrete casting, in a second time screw iron rods through the formworks at proper intervals. PVC spacers must be placed above each of these rods. Set a RAPID clamp to one end of the rod, hitting the wedge head with a light hammer blow (1). Set a second Rapid clamp at the opposite end, locking it in its position like the first one after stretching the bar with the special RAPID tensioner (2). As soon as this operation is completed, remove the tensioner and move on to the next pair of clamps.

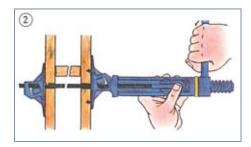

DISMANTLING FORMWORKS

Just hit the lower part of the clamp wedge with a light hammer blow (3). The RAPID clamp is immediately released and is ready to be used over and over again.

Quality guarateed

The RAPID locking formwork system provides a secure grip even after many uses. The new and exclusive surface zinc plating protects Rapid clamps against wear

