



# Instruction Sheet

The T-Coupler has two different colored wire managements. They can be used on either side of the T-Coupler by following the same wiring scheme for each side (T568A/B).

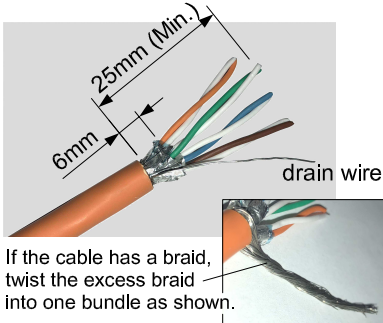


If the cable has a braid, twist the excess braid into one bundle as shown.


**Step 1:**  
Strip at least 25mm of jacket off the cable.  
Pull back the braid, and retain 6mm foil from cable end.

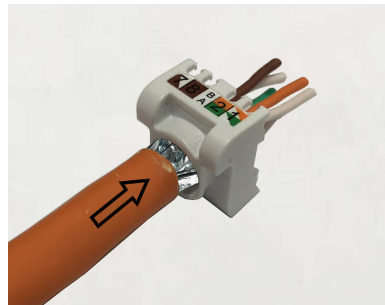

**Step 2:**  
Put wires through wire management and arrange in accordance with wiring color code (T568A/B).

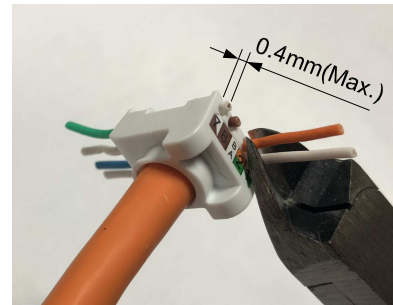


**Step 3:**  
Trim excess wires.  
The tips of the wires should be no more than 0.4mm.

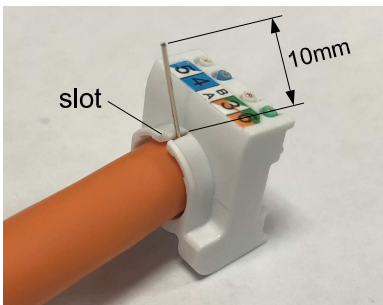


**Step 4:**  
Put drain wire (or bundled braid) in the slot of the wire management cap, and retain 10mm of drain wire from slot.




**Step 5:**  
Wrap the retained drain wire (or bundled braid) around the wire management cap as shown.

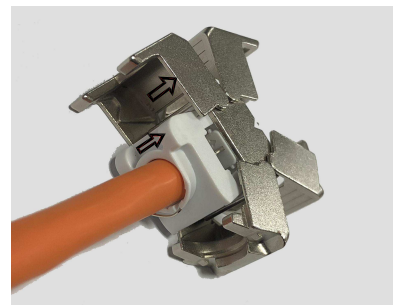


**Step 6:**  
Put the wire management on the IDC tower.  
**NOTE:** The arrows on coupler and cap should face the same direction.

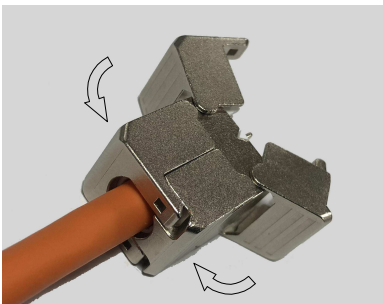

**Step 7:**  
Rotate the covers into position and compress them until they snap together.

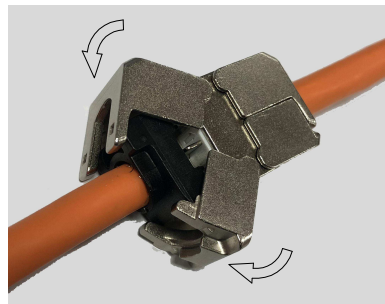

**Step 8:**  
Repeat step 1~7 to finish the termination of the other side.

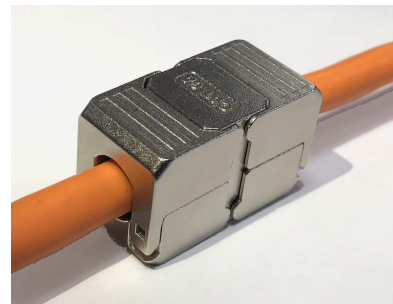

The finished termination.