

*Installation Instructions
Installationsanvisning
Monteringsanvisning
Asennusohjeet*



Papilio

Shower cabin with quick installation system

Snabbinstallerad duschkabin

Dusjkabinett med hurtiginstallasjonssystem




Suihkukaappi pika-asennusjärjestelmällä











SV 7399659, 7399725, 7365566, 7355565
7365819, 7365820, 7365821, 7365822
NO 6342066, 6312034

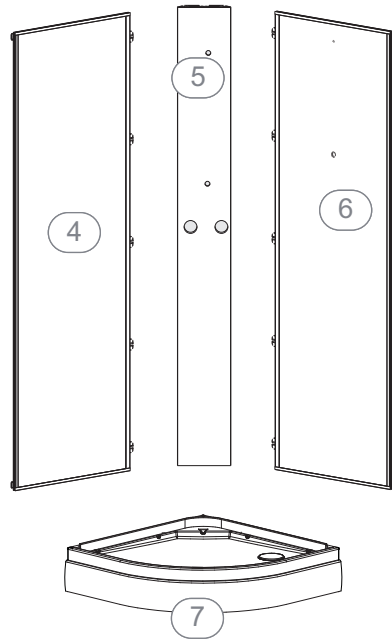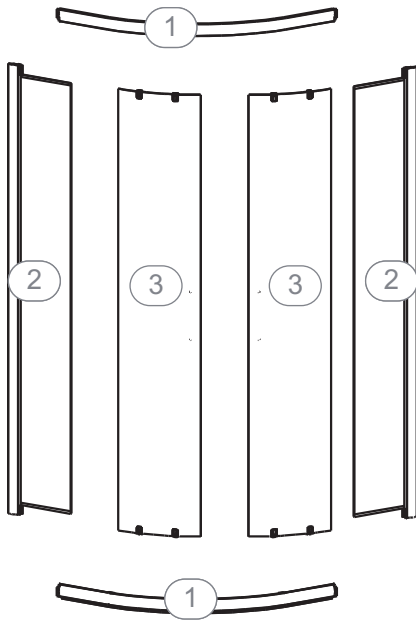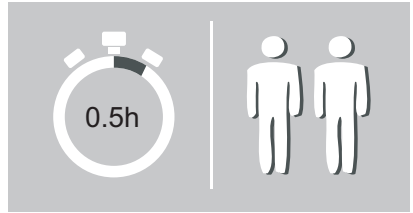

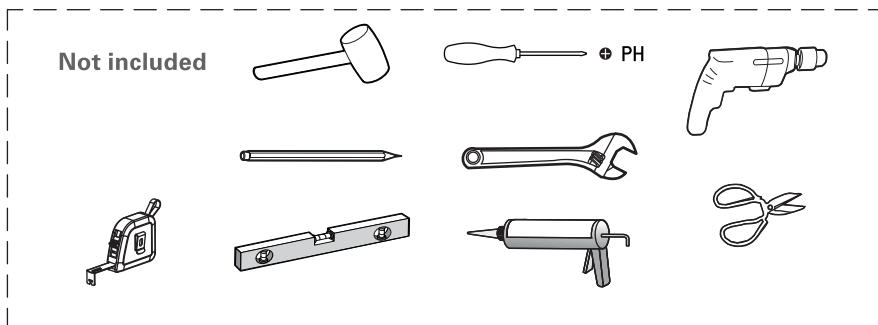



a-collection

a-collection




















A1	7391464 	x2
A2	 ST4X30mm	x2
B1	7391465 	x2
B2	7391466 	x2
C		x2
D1	7391467 	x1
D2	7391468 	x1

D3		x1
E	7391470 	x2
F1	7391471 	x2
F2		x2
F3	7391472 	x2
S	 Ø6mm	x1






1.

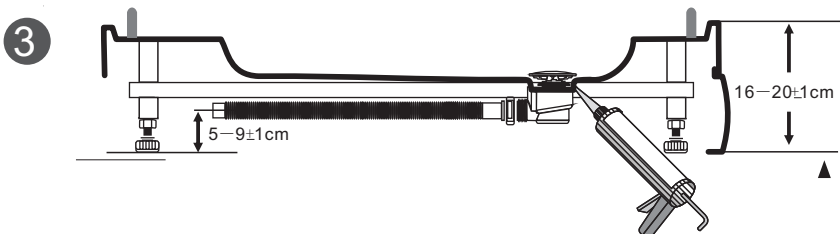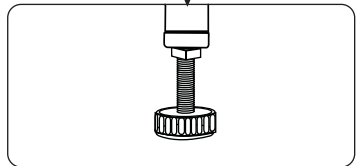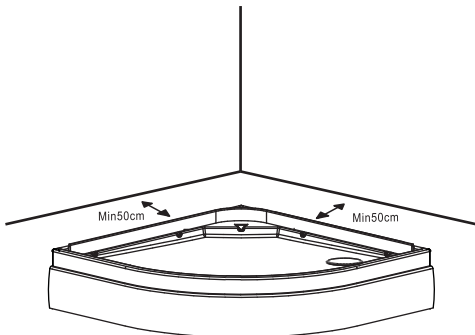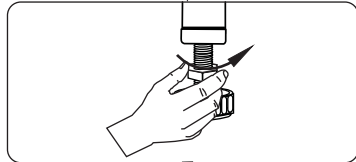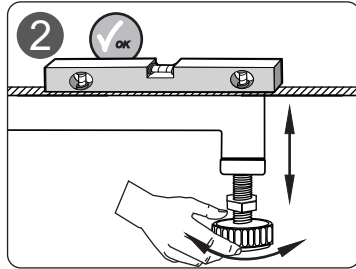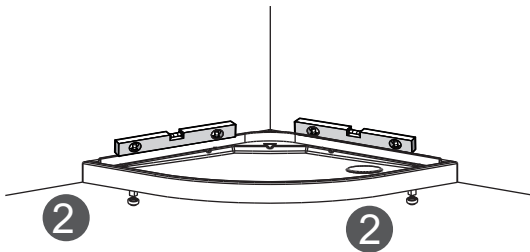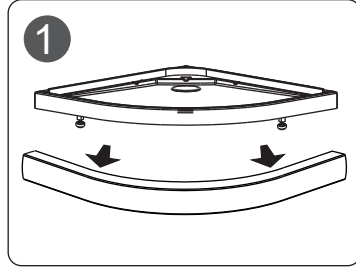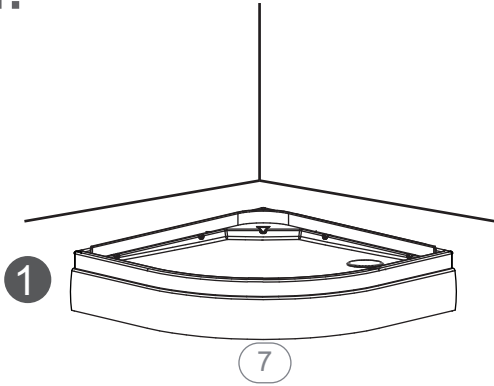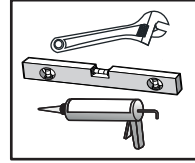




2.

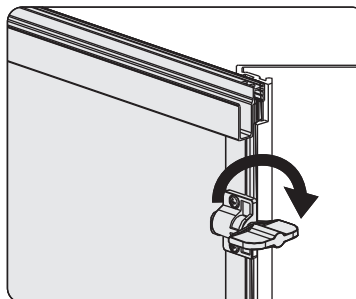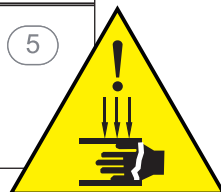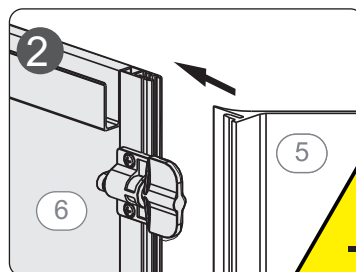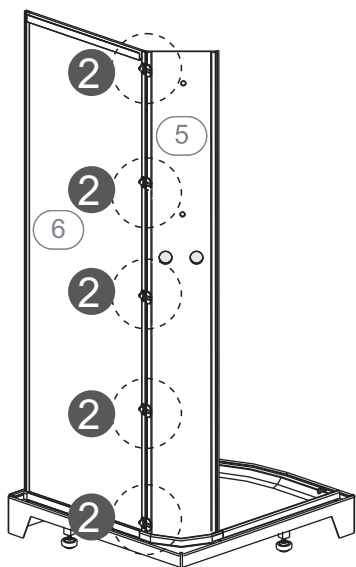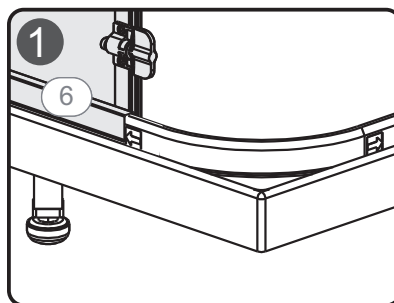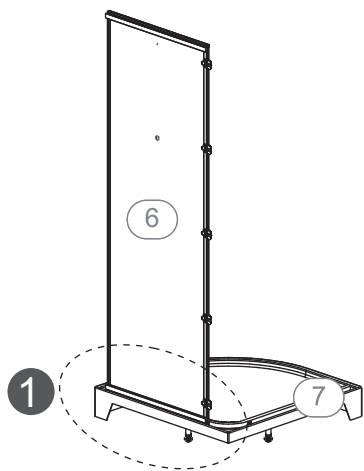


3.

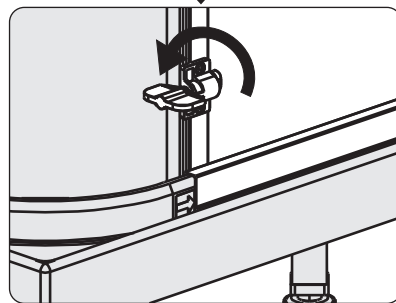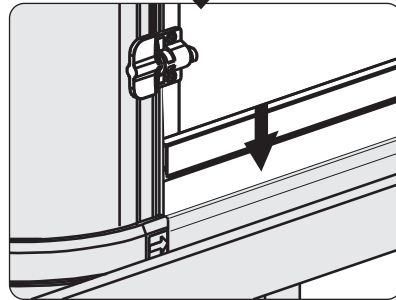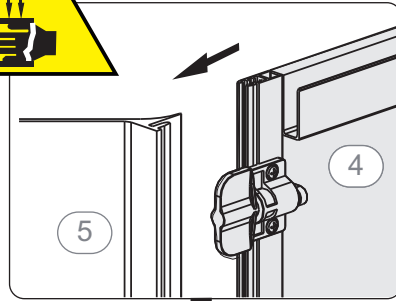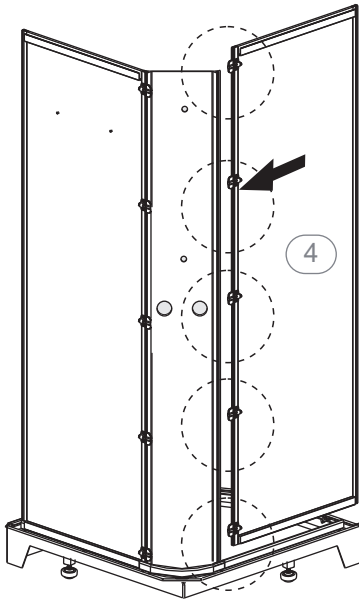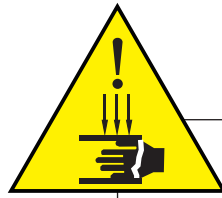


4.

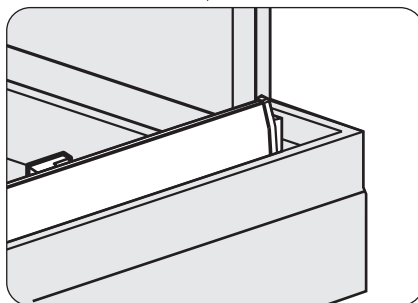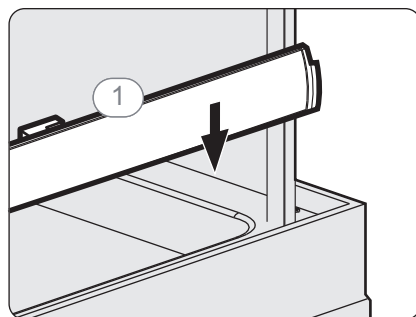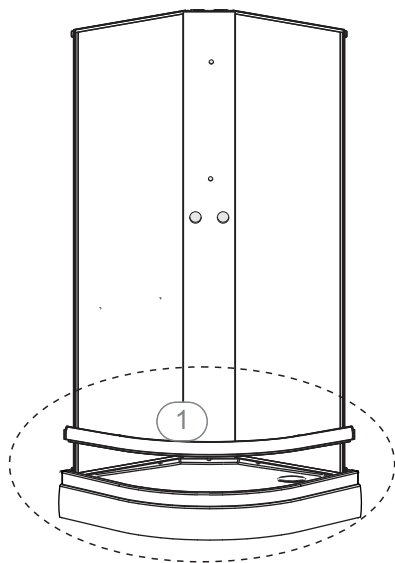


5.

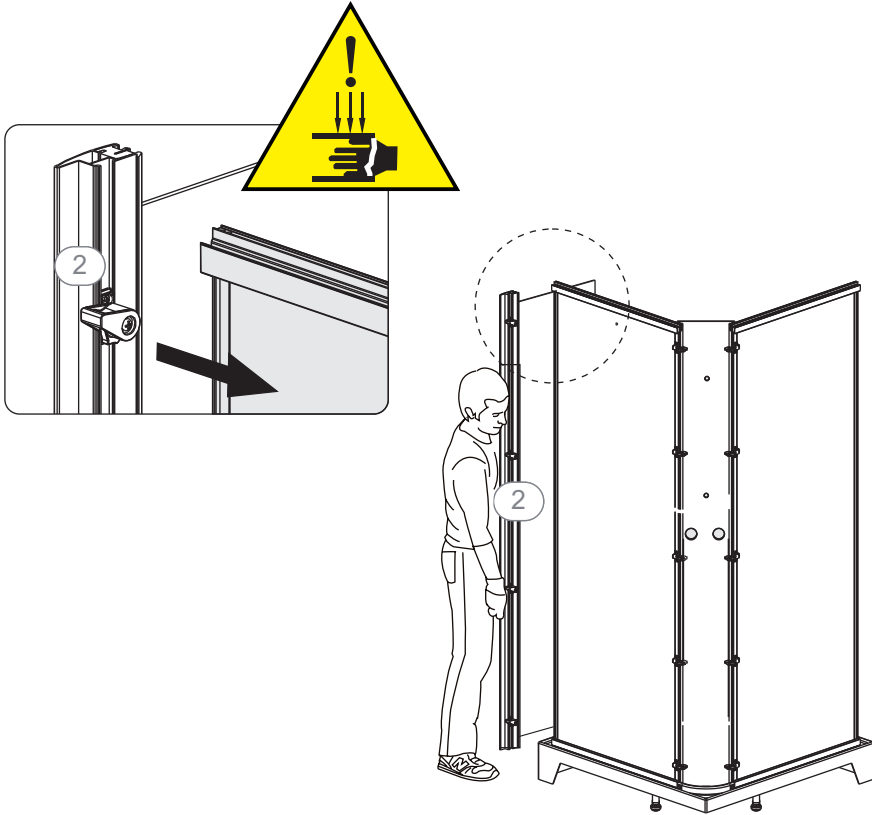


6.

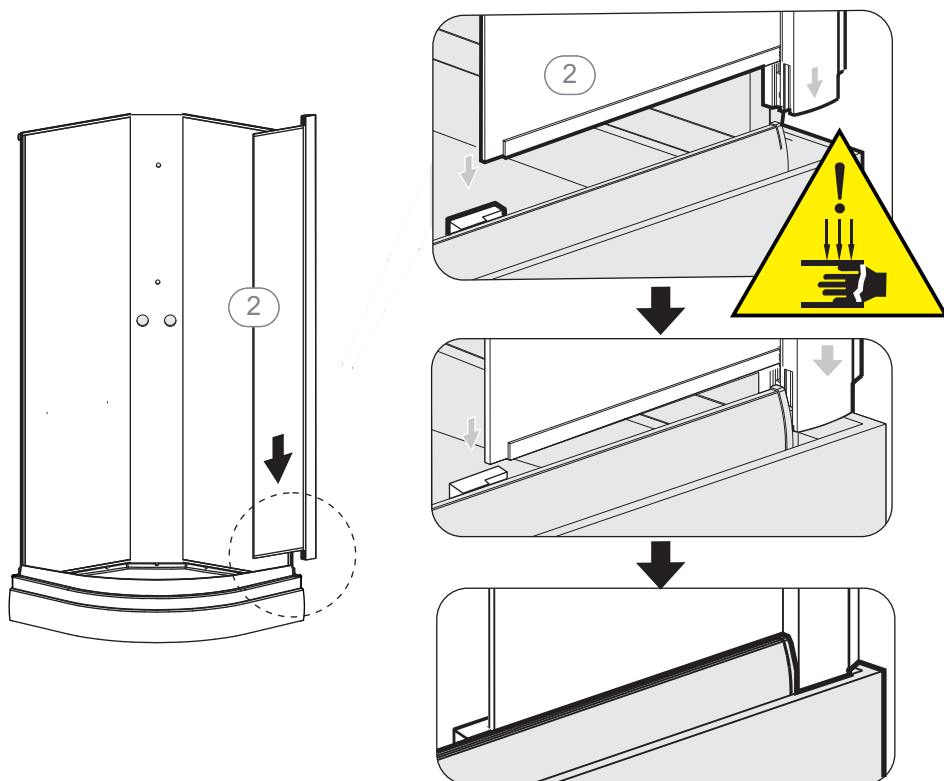


7.

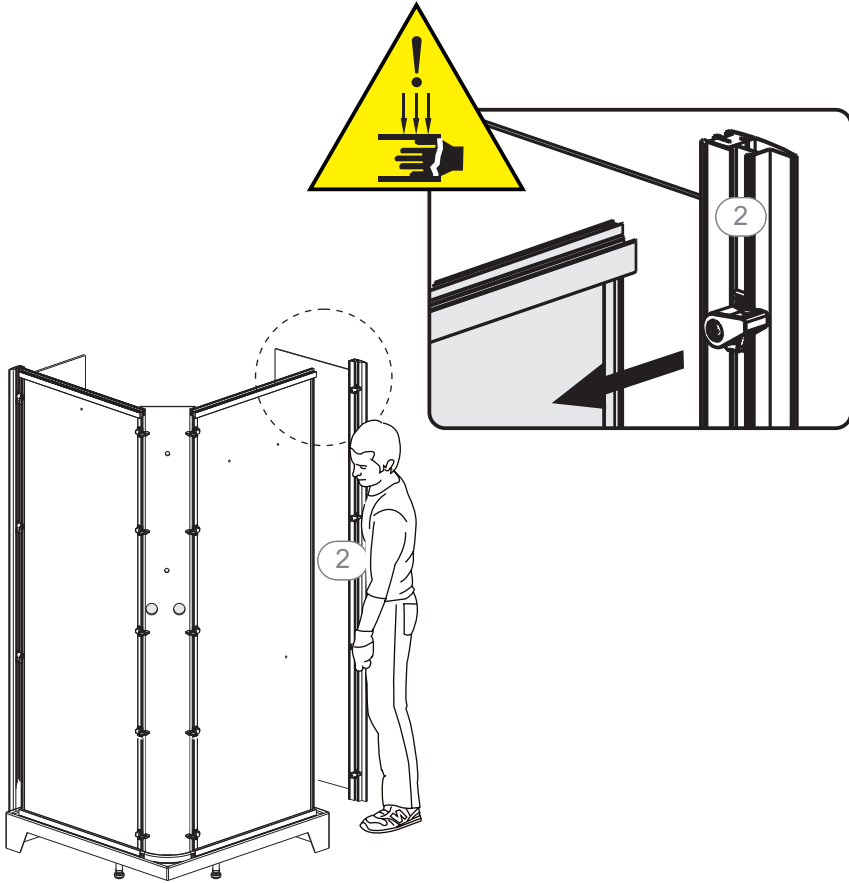




8.

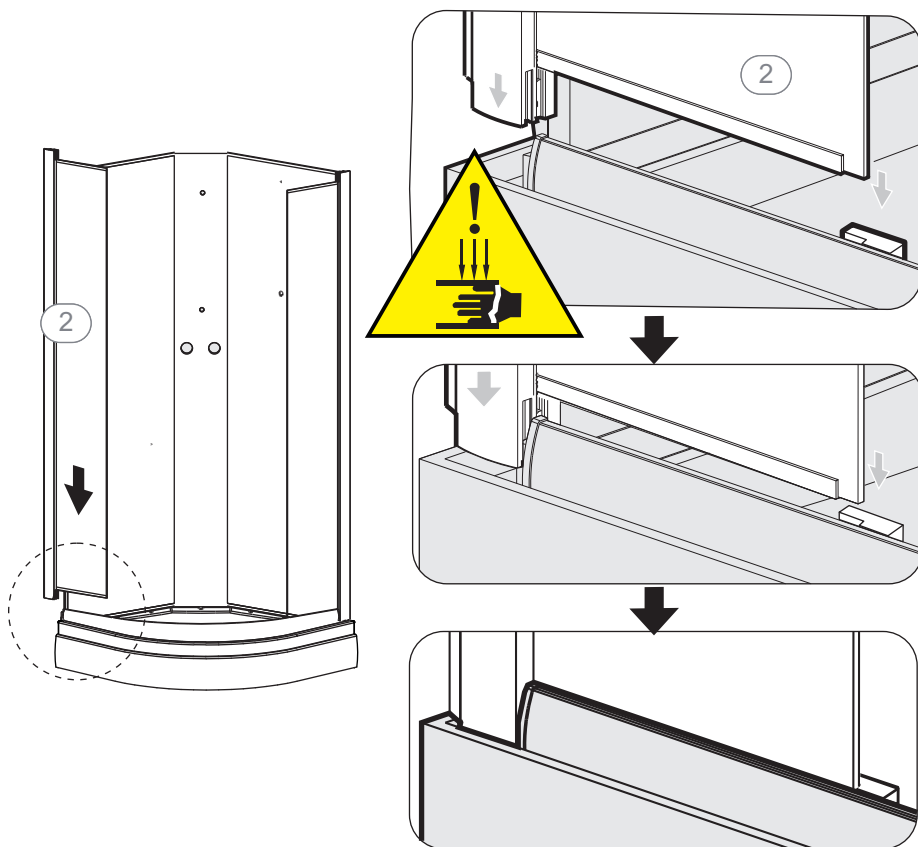




9.

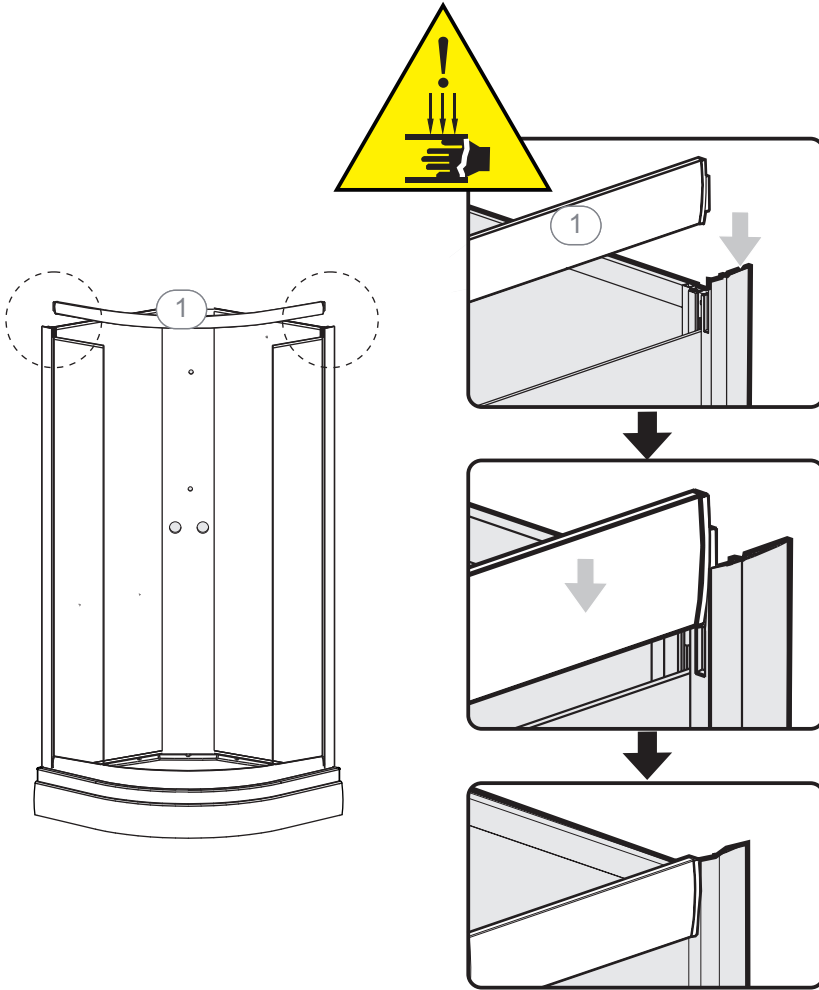





10.

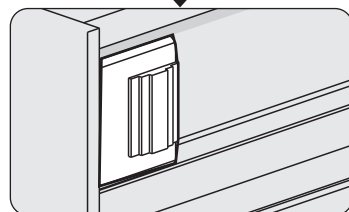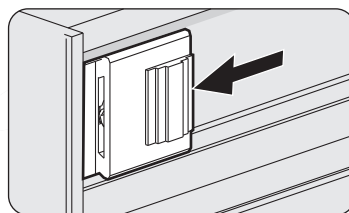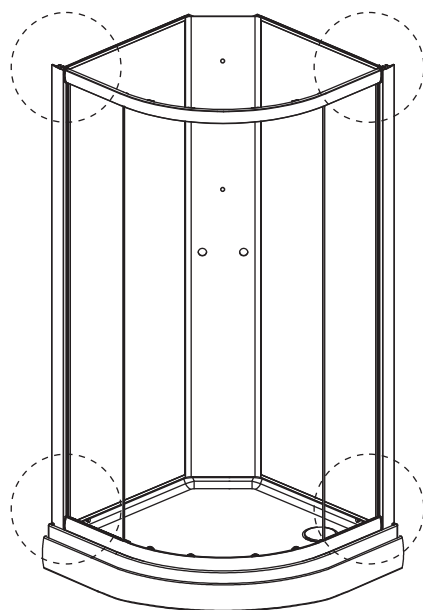







11.

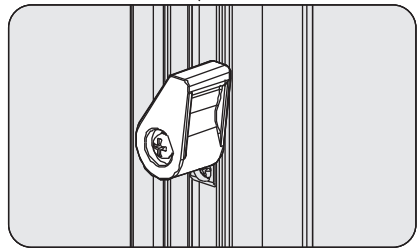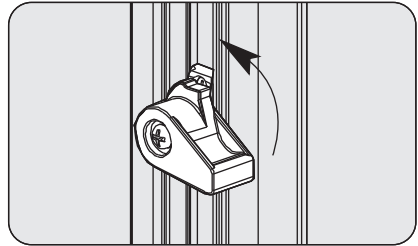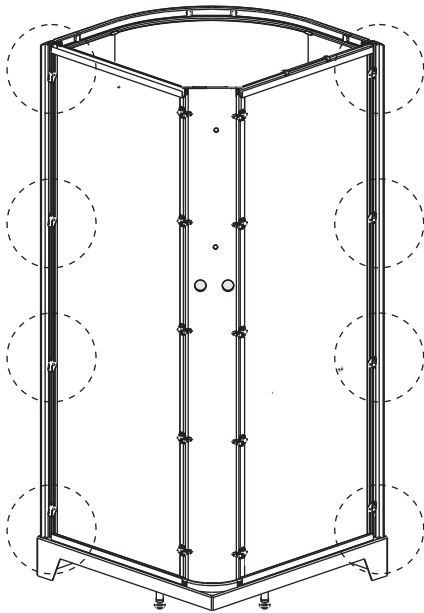








12.

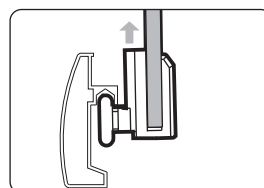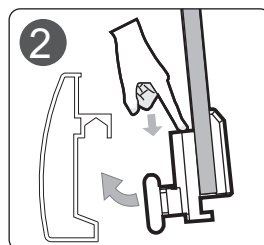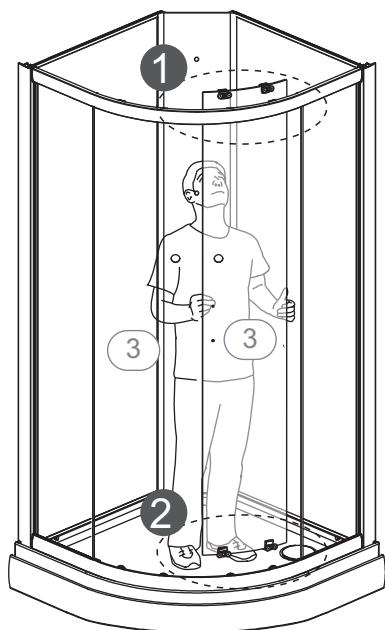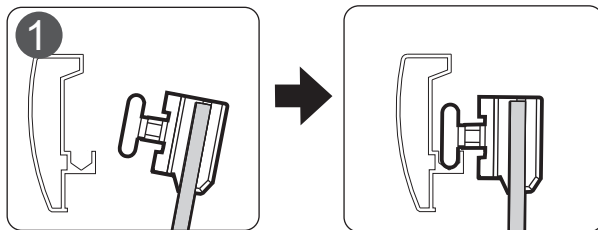



13.

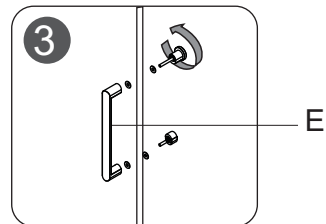
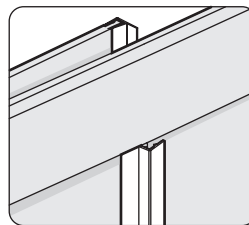
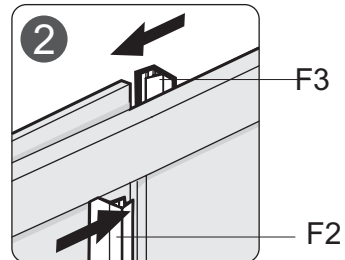
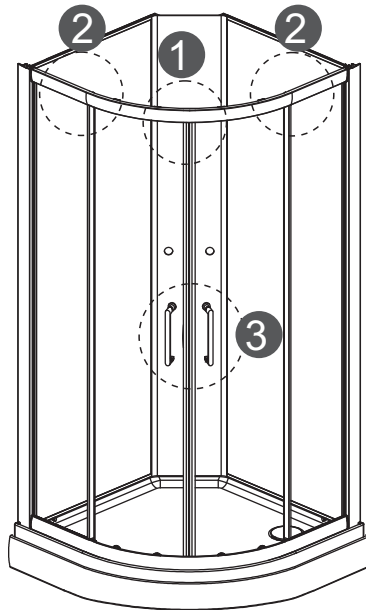
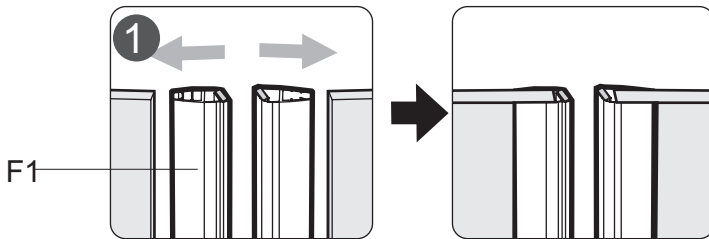
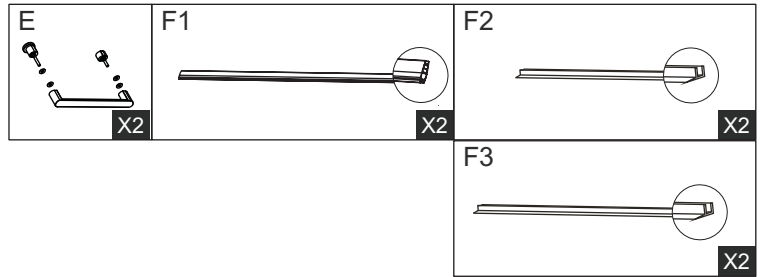


14.

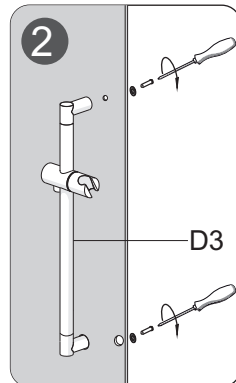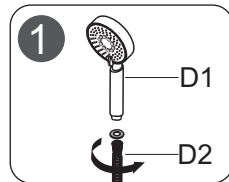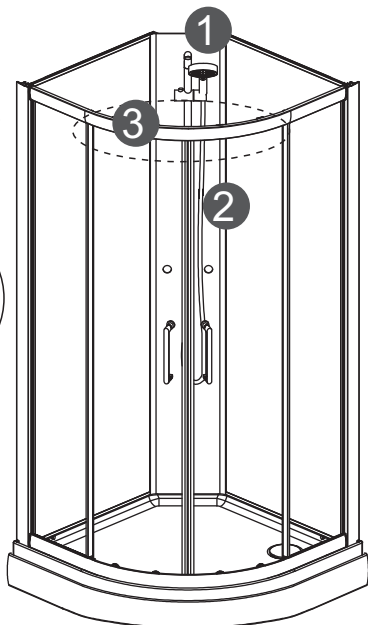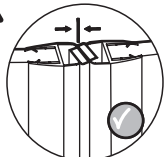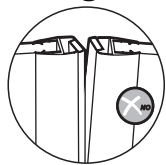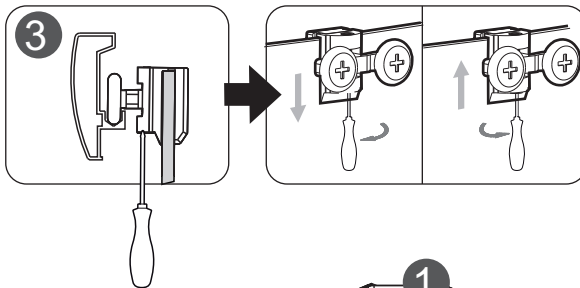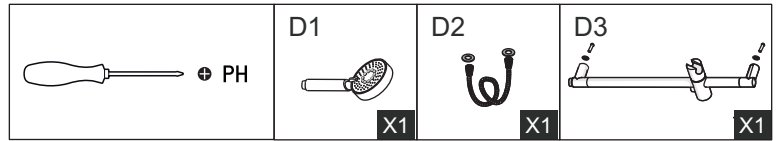

15.

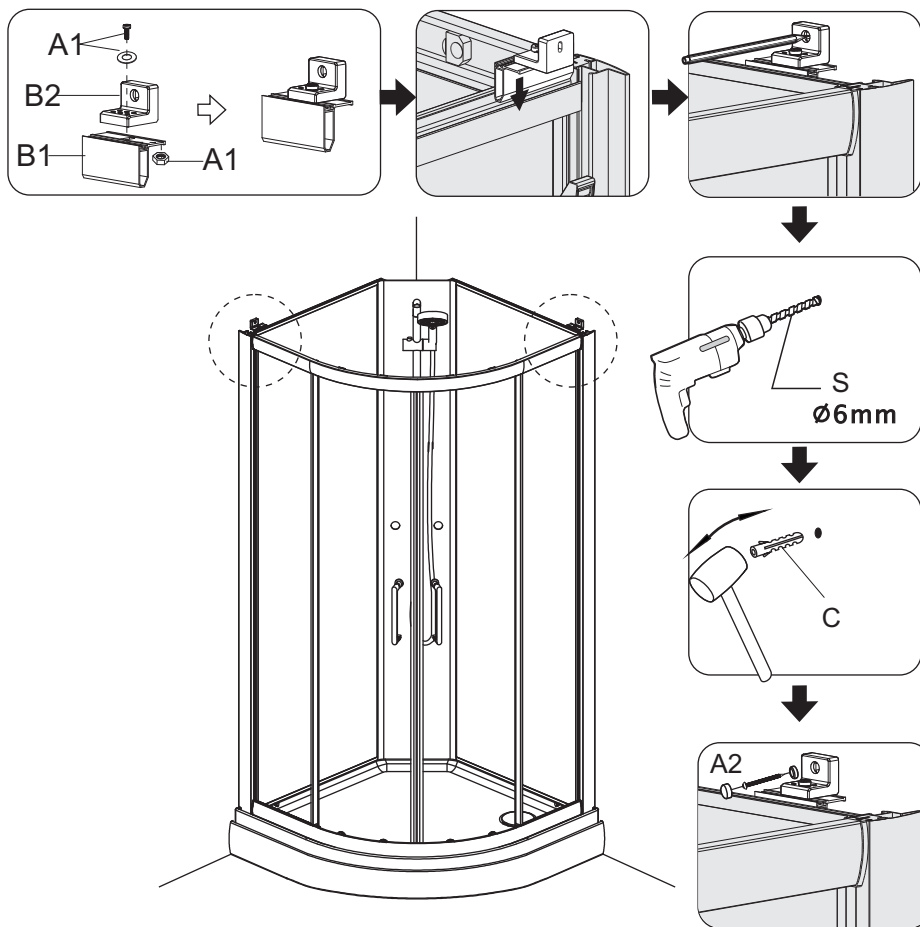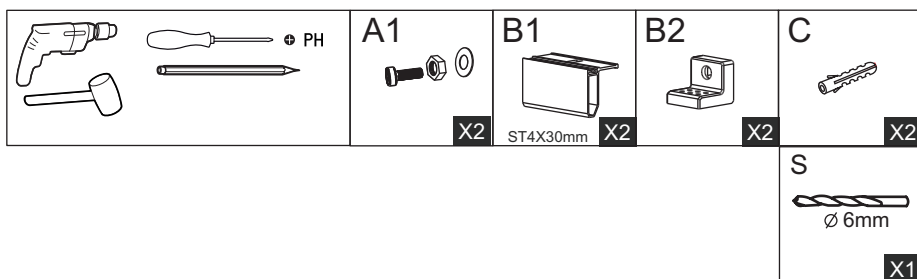

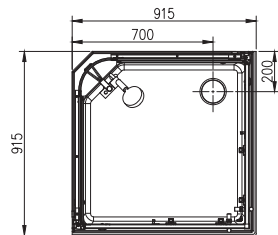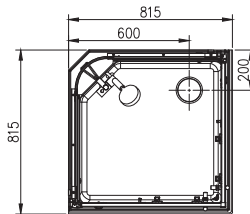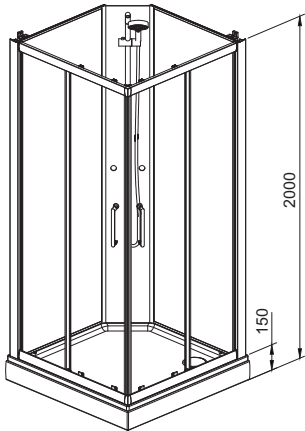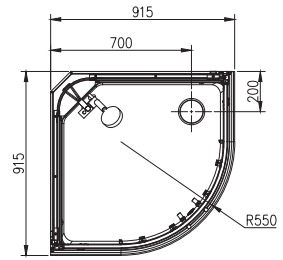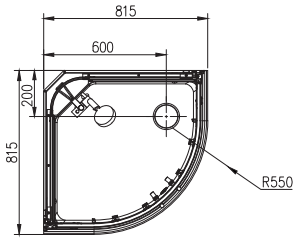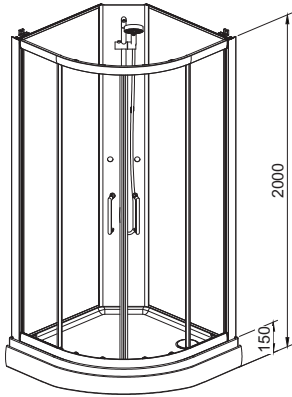



Watch installation instructions movie.

